


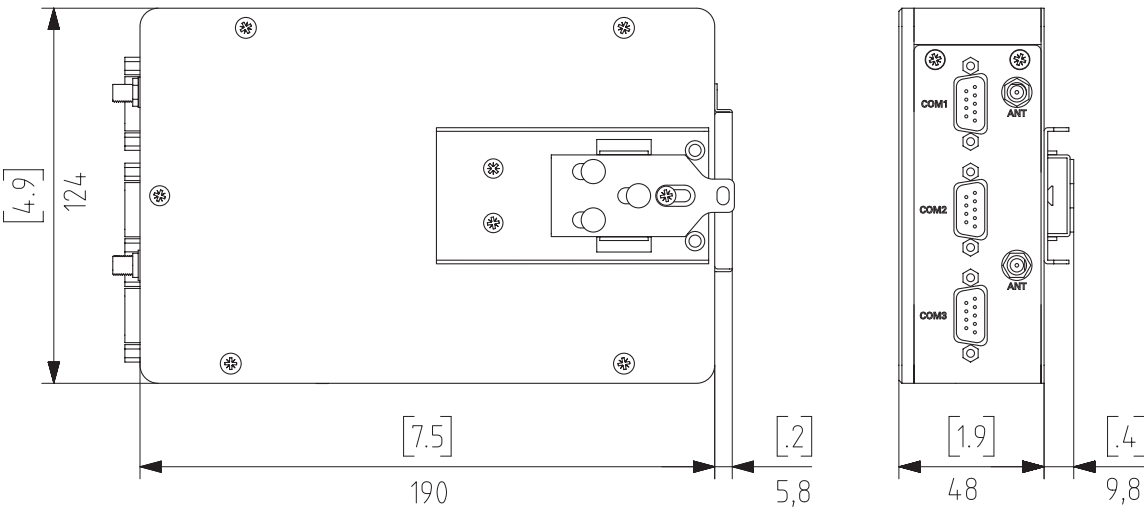


Dimensions [in]/mm



DIN rail mounting

For DIN Rail assembly, affix the DIN Rail bracket to the chassis using the three (3) screws provided. Note that the two (2) M3 flat screws should be used on the top of the bracket, while the standard M3 screw should be used to affix the lower portion of the bracket, as below.

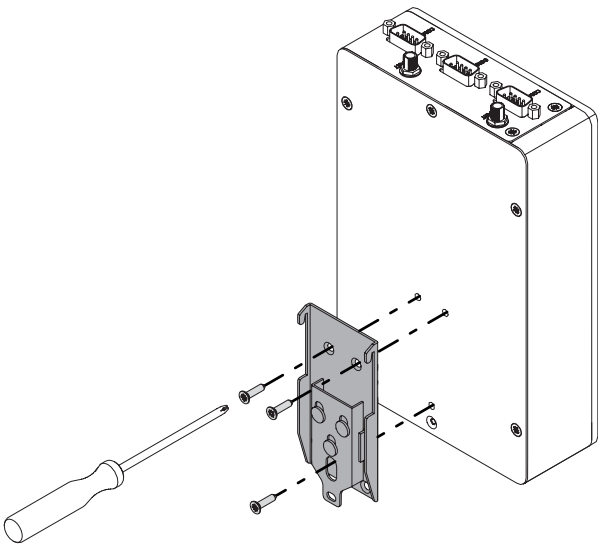

Flat support

