

DIRIS Digiware R-60

Residual Current Insulation Monitor (RCM)



Configuration with
Easy Config software



DIRIS Digiware R-60

Function

DIRIS Digiware R-60 modules combine residual current monitoring (RCM) with power metering and monitoring functions, for any combination of 1-phase, 2-phase or 3-phase circuits used in TN-S and TT earthing systems. With six RJ12 channels, they can be connected to a mix of Δ IC residual CTs and TE/TR/ITR/TF current sensors via RJ12 cables enabling quick connection and avoiding wiring errors

Advantages

2 in 1

One DIRIS Digiware R-60 module can be connected to residual CTs and traditional TE/TR/ITR/TF current sensors, to pool residual current and power monitoring.

Multi-circuit

One DIRIS Digiware R-60 module can monitor the residual current on up to 6 circuits. The Digiware modular concept means that several R-60 modules to be added within a single system, making it easy to implement RCM for a large number of outgoing circuits instead of the main incomer only.

Plug & Play Solution

The Digiware concept and the RJ45 bus enable:

- easy connection of R-60 modules to an existing DIRIS Digiware system,
- optimal scalability by adding additional modules when needed.

The connection to current sensors is quick and error-free thanks to colour coded RJ12 cables.

Smart alarms

General characteristics

- Combines residual current and power monitoring
- 6 RJ12 channels, each with an indicator light
- Alarm LED
- Compatible with Δ IC residual CTs and TE/TR/ITR/TF current sensors

DIRIS Digiware R-60 provides the most advanced RCM alarm features for preventive notifications:

- before the residual current device (RCD) trips,
- before leakage currents become hazardous for people and assets,
- if the RCD is defective.

The combination with Virtual Monitor technology specifies if the RCD has tripped on an overload or a high residual current.

Patented innovation

Thanks to an automatic learning sequence, launched for a chosen duration representative of the normal operation of the electrical installation, 6 dynamic residual current ($I\Delta$) thresholds are automatically set. This facilitates the determination of the maximum residual current not to be exceeded for each outgoing circuit.

The solution for

- > Healthcare
- > Industry



Strong points

- > 2 in 1
- > Multi-circuit
- > Plug & Play Solution
- > Smart alarms
- > Patented innovation

Conformity to standards

- > IEC 62020
- > IEC 61557-12




Create your own project

- > Find the best DIRIS Digiware configuration:
www.meter-selector.com




Applications

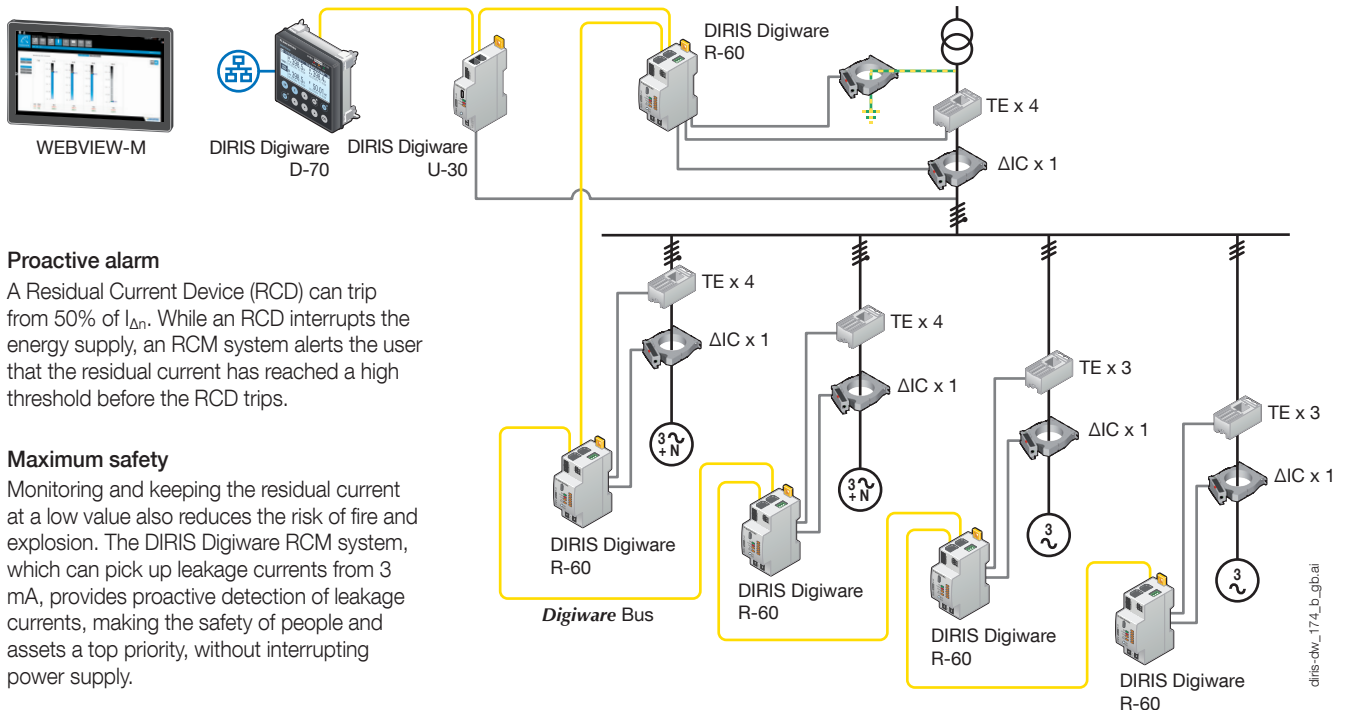

Measurements

DIRIS Digiware R-60	
Residual Current Monitoring	
I_{Δ}	•
I_{PE}	•
Metering	
+/- kWh, +/- kVAh, kVAh	•
Multi-tariff (max 8)	•
Load curves	•
Multi-measurement	
$I_1, I_2, I_3, I_n, \Sigma P, \Sigma Q, \Sigma S, \Sigma PF$	•
P, Q, S, FP per phase	•
Alarms	
Dynamic I_{Δ} and I_{PE} thresholds	•
Overloaded neutral conductor	•
Protective device (opening, trip, defective RCD)	•
I_{Δ} and I_{PE} comparisons	•
Trends	
I_{Δ}	•
I_{PE}	•
Load curves	•

Front panel

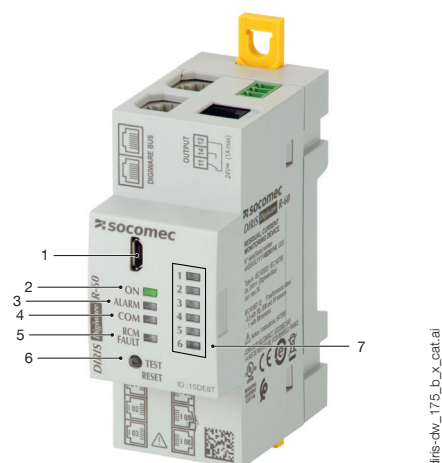

1. USB port for configuration.
2. ON LED. Lights when the device is active.
3. ALARM LED for system alarms (CT disconnected, etc.).
4. COM LED. Flashes when communication bus is active.
5. RCM FAULT. Lights if there is an RCM alarm on any channel 1 to 6.
6. TEST/RESET button. Starts the self-test (long press) and resets alarms (short press). Used during auto-discovery process for the resolution of address conflicts.
7. Individual LED alarms signals for each channel 1 to 6.

DIRIS Digiware R-60

Residual Current Monitoring module


Connections

Associated sensors


Various types of residual CTs and current sensors can be connected to the DIRIS Digiware R-60 module: Δ IC solid core, Δ IP-R split-core residual CTs and solid-core TE, split-core TR/iTR, flexible TF current sensors. This range of sensors can be adapted to all types of new or existing installation. A quick RJ12 connection makes wiring easy and reliable and prevents wiring errors.

For further information, refer to the residual CTs and current sensors catalogue pages

TE solid-core current sensors

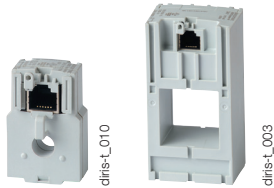

Δ IC solid core residual CTs

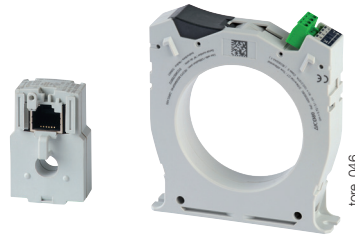


TR / iTR split-core current sensors



TF flexible current sensors




Δ IP-R split-core residual CTs

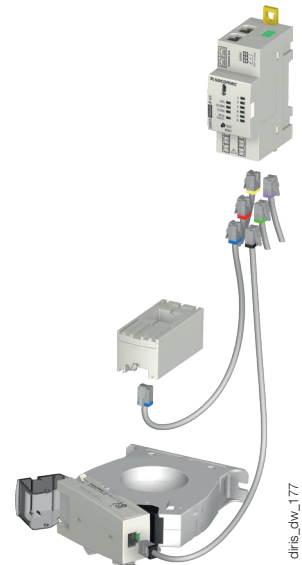


Connection examples

RCM (I_{Δ}) – 3 x 3-Ph load
Load current monitoring - L1, L2, L3, upstream

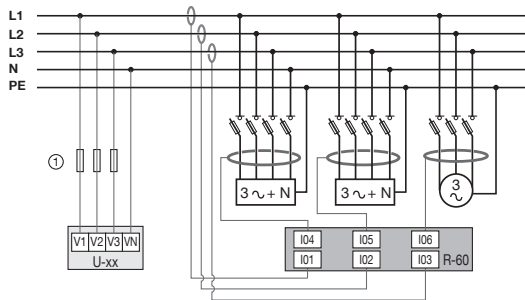


diris-dw_176_b_1_x_cat.ai

RCM ($I_{\Delta} + I_{PE}$) – 1 x 3-Ph load
Load current monitoring - 1 x 3-Ph load (L1, L2, L3, N)

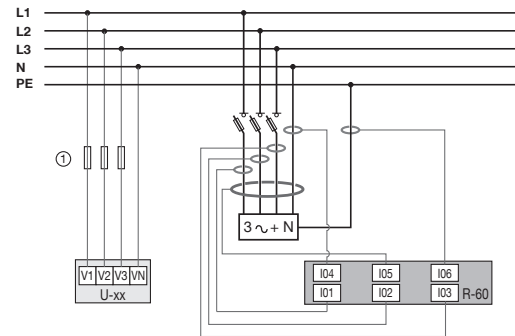


diris-dw_179_a_1_x_cat.ai

RCM (I_{Δ}) – 3 x 3-Ph load
Load current monitoring - 3 x 3-Ph balanced loads

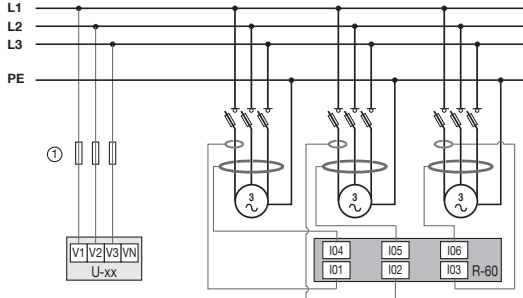

diris-dw_180_a_1_x_cat.ai

RCM (I_{Δ}) – 3 x 1-Ph load
Load current monitoring - 3 x 1-Ph loads

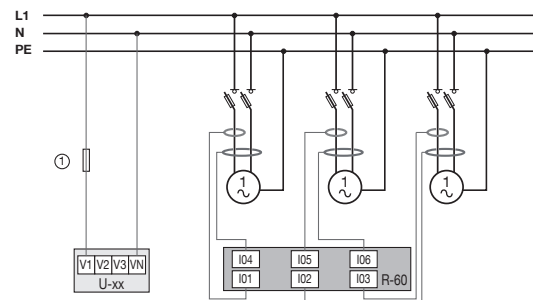


diris-dw_181_a_1_x_cat.ai


Balanced load
 Unbalanced load

Current transformer
 2 A gG
 Residual CT

Dimensions (mm)

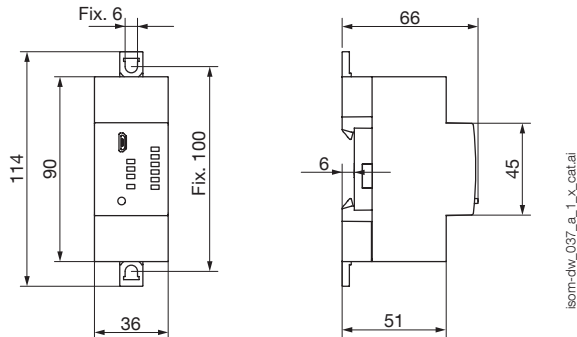

Terminals and wiring

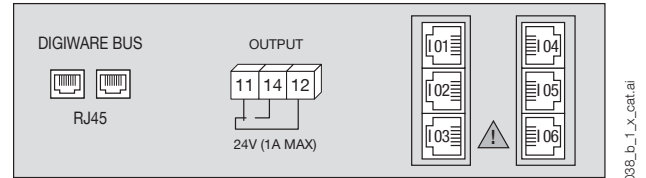

DIGIWARE BUS: RJ45 bus to connect to other Digiware modules

11 - 12 - 14: alarm relay output

I01 - I02 - I03 - I04 - I05 - I06: RJ12 connection of residual CTs (via the T-10 adaptor) and current sensors

Characteristics

Measurement characteristics

RCM type	Type A according to IEC 62020
Number of RJ12 channels	6
Residual CTs connection	RJ12 cables via Digiware T-10 adaptor
Current sensors connection	RJ12 cables
Current measurement accuracy	Class 0.5 according to IEC 61557-12
Active energy accuracy	Class 0.5 according to IEC 61557-12
Reactive energy accuracy	Class 1 according to IEC 61557-12

Digital output characteristics

Number of contacts	1
Contact type	Changeover switch
Nominal voltage	24 VAC / 24 VDC
Max. current	1 A
Default mode	Normally open

Mechanical characteristics

Mounting type	DIN-rail or backplate
Case Ingress Protection rating	IP20
Weight	103 g

Electrical characteristics

Auxiliary power supply	24 VDC with Digiware bus
R60 consumption	0.5 W

Communication characteristics

Digiware bus	
Function	Connection between Digiware modules
Cable type	Specific Socomec RJ45 cable
USB	
Protocol	Modbus RTU over USB
Function	Configuration of DIRIS Digiware modules
Cable type	Type B micro USB connector

Environmental characteristics

Operating temperature	-10 ... +55 °C
Storage temperature	-25 ... +70 °C
Operating humidity	55 °C/97% RH
Operating altitude	< 2000 m

References

Module	Reference
DIRIS Digiware R-60	4829 0114
Accessories	Reference
DIRIS Digiware T-10 RJ12 adaptor	4829 0620

RJ12 connection cables	Cable length (m)										
	0.1	0.2	0.3	0.5	1	2	3	5	7	10	50 m reel + 100 connectors
Number of cables	Reference	Reference	Reference	Reference	Reference	Reference	Reference	Reference	Reference	Reference	Reference
1	-	-	-	-	-	-	-	4829 0602	-	4829 0603	4829 0601
3	4829 0580	4829 0581	4829 0582	4829 0595	4829 0583	4829 0584	4829 0606	4829 0607	4829 0608	4829 0609	-
4	-	-	-	4829 0596	4829 0588	4829 0589	-	-	-	-	-
6	4829 0590	4829 0591	4829 0592	4829 0597	4829 0593	4829 0594	-	-	-	-	-

Expert Services

Require integration onto your network?

No problem for our "Expert Services" team. They will help you to integrate all your SOCOMEC devices, **audit** your system, **commission** selected equipment and **train** your staff in its use.

For further information, please contact your nearest SOCOMEC branch.